



NOTES FOR WORK AREAS AT TRUCK DOCK:

1. WORK AREA TO BE CORDONED OFF WITH PLASTIC DELINEATOR DRUMS (SEE DETAIL TD-82.1 THIS DWG.) AT 10 FT. ON CENTER. CONNECT DRUMS WITH YELLOW PLASTIC "CAUTION-CAUTION" TAPE.
2. INSTALL SIGN "A" AT 200 FT. IN ADVANCE OF EACH WORK AREA, OR AT LOCATION(S) DESIGNATED BY THE ENGINEER.
3. CONTRACTOR'S VEHICLE, DISPLAYING STANDARD FOUR LAMP FLASHING HAZARD SIGNAL LIGHTS (PARKING AND TAIL LIGHTS) AND FOUR LAMP SEALED BEAM ROTATING YELLOW WARNING LIGHT (MOUNTED 7 TO 10 FEET ABOVE THE ROADWAY) TO PRECEDE EACH WORK CREW.

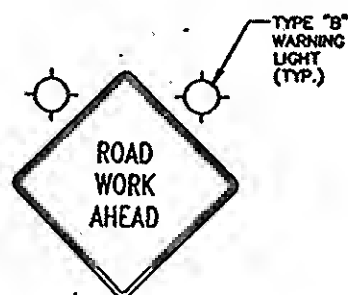

1/2" x 4" SLASH TIES ON GRADE FLANGES/REFLECTORIZED BACKGROUND

SON "A"

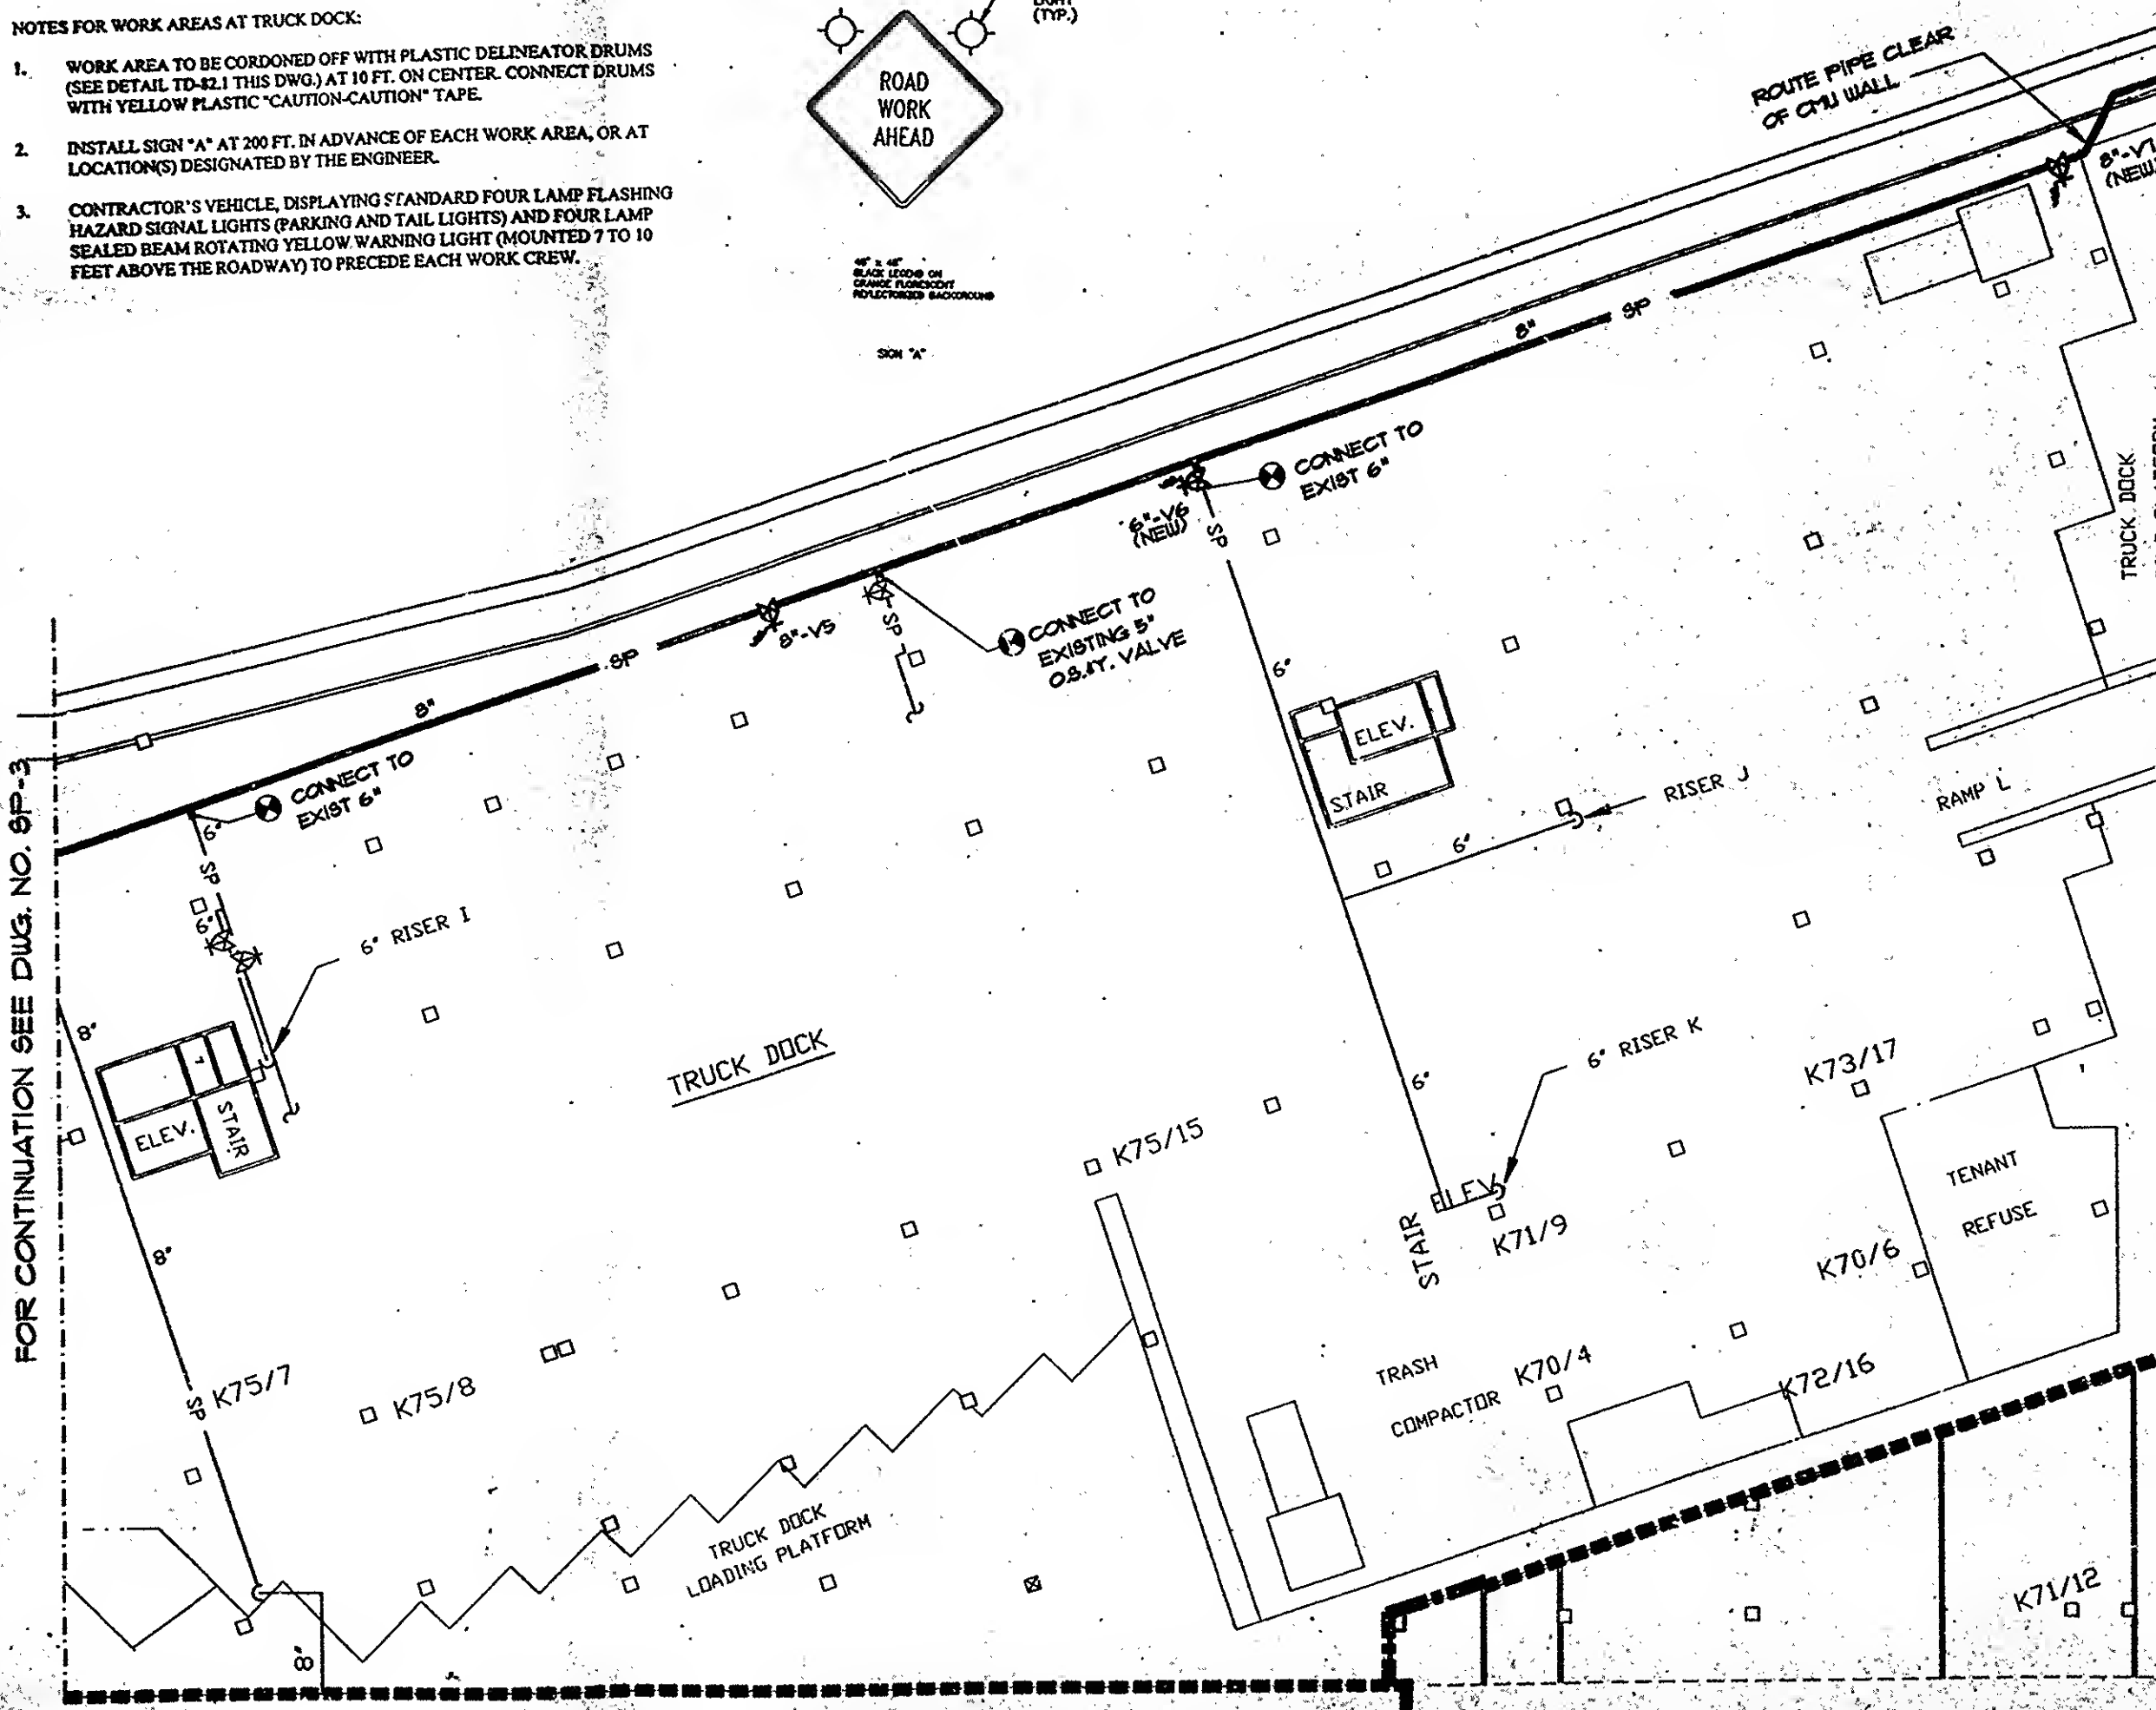

FOR CONTINUATION SEE DWG. NO. SP-7

PART PLAN

0 16 32  
SCALE IN FEET